




**DOOR/WINDOW
SMART SENSOR SERIES**

#SmartSense

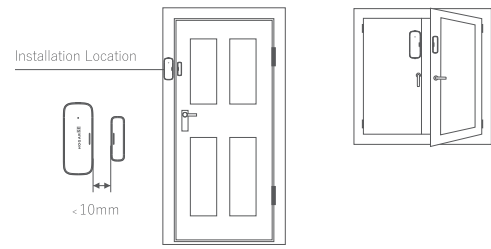

INSTALLATION


- **REMOVE** the protective film of **3M glue** and affix the Door/Window Sensor onto the spot you have chosen.



- It is **ALWAYS** advisable to place **The Magnetic Part on the Movable Part** of your door/window frame and the Main Body on the Non-movable part of your Door/Window frame.


ADDING DOOR/WINDOW SENSOR TO YOUR HOME

- Open the Hogar SE App and go to **"Rooms"**.
- Click on **"+"** Button and select **"Door/Window Sensor"**. Follow the prompts on your App for subsequent steps.
- **Press and Hold** the button for 5 seconds to **POWER ON** the Door/Window Sensor as shown below:

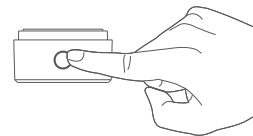

- You will soon see the **BLUE LED** flash that indicates that the Door/Window Sensor has entered into **Enrolling Mode**.
- Click **"Confirm Indicator Rapidly Blink"** on your Hogar SE App.

 Reset the device first.
Power on the device and confirm that indicator light rapidly blinks



Confirm indicator rapidly blink

WARRANTY

Hogar Provides Limited Warranty of 18 months on every product.

ENQUIRY

For Orders/Details, kindly reach out to us at info@hogarcontrols.com



Scan QR code for more details on warranty and sales enquiries

DESCRIPTION

The Door/Window Sensor detects & emits wireless signals on the opening & closing of your doors/windows. This can be used as an alert on your Hogar SE App and to trigger & automate multiple other smart devices connected to your Hogar SE Gateway & App.

The Door/Window Sensor uses the principle of magnetic control and triggers a Wireless signal as soon as the magnet is separated from its main body by a certain distance (about **20mm**)



SPECIFICATIONS

Model No.	HSE-DW-001
Battery Type	CR1632
Static Current	<= 5 μ A
Main Body Size	54 x 22.2 x 12.5 mm
Magnet Body Size	33.3 x 10.2 x 12.5 mm
Operating Temperature	-10 $^{\circ}$ C - +55 $^{\circ}$ C
Humidity	0 - 95%
Wireless Protocol	ZigBee 3.0
Transmit Frequency	2.4000 - 2.4835 GHz

PRE INSTALLATION MANDATORY CHECKS

- Ensure that the main body and the Magnetic Part of your Door/Window Sensor are placed **ON THE SAME LEVEL** and **NOT** separated by a distance of more than **10mm** as shown below: